


# BIG RED<sup>®</sup>

## STORMWATER PRODUCTS

### HIGH FLOW SILT FENCE

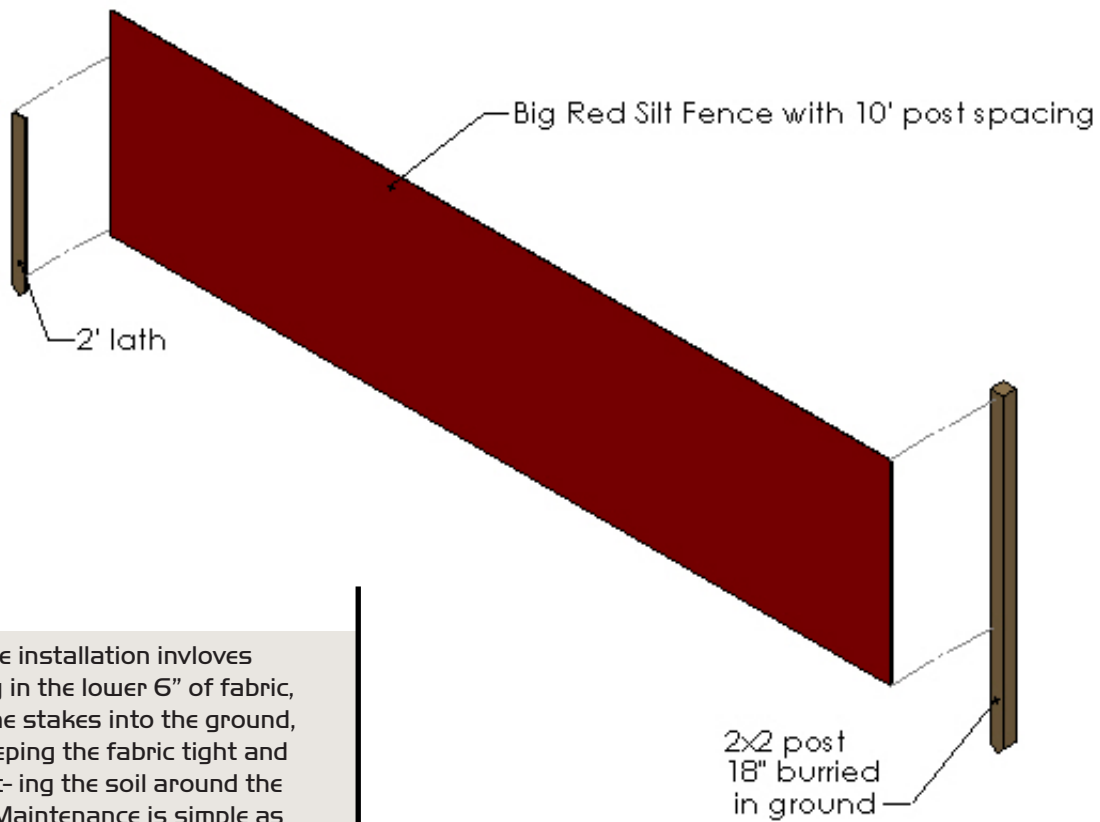

Simple installation involves trenching in the lower 6" of fabric, driving the stakes into the ground, while keeping the fabric tight and compacting the soil around the trench. Maintenance is simple as well by digging away the sediment in front of the Big Red Silt Fence.

If necessary, remove the entire ditch check and reinstall, it is that strong. If it is severely plugged with sediment, you may need to brush the fabric out but typically it falls right off.

